

Before starting up, please read this manual carefully in order to ensure the correct and safe installation and usage. Damage caused by not following the instructions of this manual will always invalidate the warranty. CaterChef would like to emphasize that this instruction manual needs to be read carefully before use and should be stored for later use.

TECHNICAL SPECIFICATIONS:



MODEL	GN	DIMENSIONS (CM)	VOLTAGE (V)	HERTZ (HZ)	POWER (W)
688.030	1/1	25,5 x 35,4 x 59,5	220-240 V	50-60 Hz	1200

For more information we would like to ask you to go to our website www.emga.com.

You could for example search on item nr. and go to *downloads*.

Here, you will be able to find more information like the exploded views, the spare part lists and CE-certificates.

TYPE PLATE

 	
MODEL: 688018	POWER: 3500W 15A, IPX4
DATE: 2019.04	HERTZ: 50Hz
VOLTS: 220-240V~	PHASE: 1PH
SN: C451904062	PO: KA19085-01(#413962)

The type plate (the picture is an example) is located on the back of the device. You are requested not to remove it.

The type plate can for example be used to determine, when the item was purchased (view PO) and from which production line (view SN) it originates. This information may be essential with regard to warranty.

It also contains important information such as the voltage and power

supply which determines the ability to connect the device safe.

TRANSPORT AND STORAGE:



As long as the products are packed, please make sure you never place them upside down. This could damage the appliance. During transport, the product should be placed carefully. Make sure you prevent any drastic vibration during transport. You should never place or store this product outside or in open air for a longer period of time than a few hours (not even packed). It should be stored in a well-ventilated warehouse without corrosive

gasses. When, in case of an emergency, you need to store them temporarily outside, you should take measures to protect them from rain or moisture.

SAFETY PRECAUTIONS AND USAGE ENVIRONMENT:

1. Remove all packaging material and any protective film from the device.
2. This product should be placed in a balanced and well ventilated spot and its left and right sides should be free from obstacles for more than 10cm. It's back-side should be free from the obstacles (like a wall etc.) for more than 20cm.
3. During operation, do not place any stuff in front of the appliance to make sure it could be operated at any time needed.
4. Do not place the appliance on a carpet, a tea towel, tablecloth (vinyl) or another surface that cannot withstand high temperatures. This could cause fire hazard.
5. Do never cover the appliance with foil; this could cause overheating and therefore danger.
6. Never plug the power cord into an extension cord or wall outlet to which multiple devices are connected.
7. Never put the plug in the socket with wet hands.
8. When disconnecting the device from the power, never pull from the cord, only the plug.
9. The power pressure of this equipment should conform to the supply voltage of this product.
10. The user should install the suitable power switch, fuse and leakage-protector near to the equipment.
11. Before usage, this equipment must be connected (safe) to a grounded socket.
12. Before starting up, you should check whether the socket you want to use is grounded.
13. Ensure whether all the connections of all the electric elements of the product are firm or not, and whether the safety grounding is reliable or not.